

FAULT	DESCRIPTION	GREEN	YELLOW	RED
1	No Power to Printer / No voltage to Power Supply	OFF	OFF	OFF
2	Cassette Removed / Ribbon Broken or out	ON	ON	ON
3	Low Foil Warning	ON	ON	FLASHES
4	Print Quantity Reached / No Format Loaded after Programming	ON	FLASHES	OFF
5	Format Loading / No Format Loaded	ON	OFF	OFF
6	No Font Loaded to Printer for Format requirement	ON	Flash Twice , wait 1 second and repeat	OFF
7	Format Co-ordinates not correct for Print Area	ON	Flash Three , wait 1 second and repeat	OFF
8	Format Loaded, awaiting Print signal	ON	ON	OFF
9	Linear Home Sensor "A" not registering / Faulty	ON	OFF	Flash Twice , wait 1 second and repeat
10	Linear Home Sensor "B" not registering / Faulty	ON	OFF	Flash Three , wait 1 second and repeat
11	Pressure Switch Faulty, whilst trying to print	ON	OFF	Flash Four , wait 1 second and repeat
12	Vertical Home Sensor Faulty	ON	OFF	Flash Five , wait 1 second and repeat
13	Pressure switch activated out of sequence	ON	OFF	Flash Six , wait 1 second and repeat
14	Vertical Home Switch activated out of Sequence	ON	OFF	Flash Seven , wait 1 second and repeat
15	Printhead Temperature too High	ON	Flash with Red	Flash with Yellow
16	Printhead Thermistor Fault / Disconnected	ON	OFF	Flash Eight , wait 1 second and repeat
17	Processor Fault / Watchdog Failed	FLASHES	OFF	OFF
18	Character Generator Failed	ON	Flash Four , wait 1 second and repeat	OFF
19	Font Size wrong	ON	Flash Five , wait 1 second and repeat	OFF
20	Barcode Failed, characters or code unrecognized	ON	Flash Six , wait 1 second and repeat	OFF
21	Allocated Memory Fail	ON	Flash Seven , wait 1 second and repeat	OFF
22	Printhead linear position incorrect	ON	ON	Flash Nine , wait 1 second and

				repeat
--	--	--	--	--------