


EUROCODE FOIL SENSOR DETAILS

Note ! SOME COMPONENTS & WIRES OMITTED FOR CLARITY


USE KIT No. ALA 620218

(includes all components,screws & fittings needed)

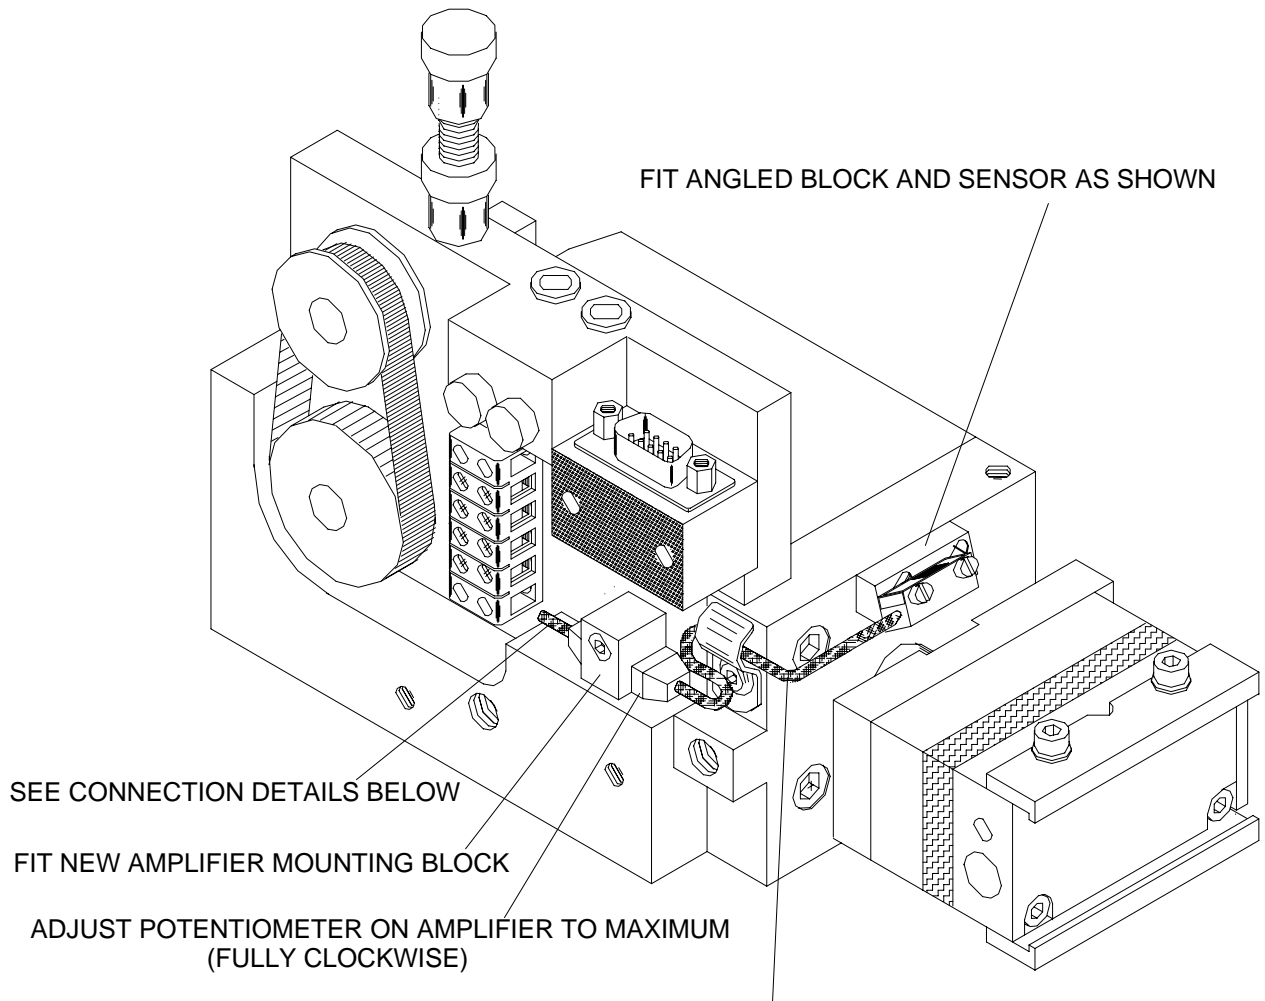

1. FIT WIRE UNDER P'CLIP, BENEATH EXISTING WIRES, TAKING CARE NOT TO DAMAGE CABLE.
2. KEEP CABLE LENGTH TO A MINIMUM BETWEEN THE PHOTOCELL AND P'CLIP, TO STOP DAMAGE TO THE CABLE WHEN PRINTING.

CONNECTION DETAILS

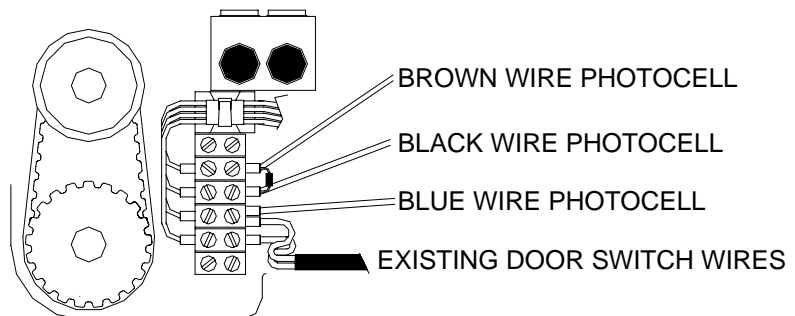

NOTE ! THE RESISTOR MUST BE LEFT CONNECTED AS SUPPLIED, FITTED BETWEEN THE BROWN & BLACK WIRES.